

Explosion-proof DALI LED Driver Software User Manual

Software Version: 2.19.8.65

Release Date: 2023-09-01



During programming, the driver should be electrified.
Recommend to remove LED lamps during programming driver.

Software Package List



Smartkey
Network
setup.rar



Smartkey
Network
setup.exe

→ decompressing file →

Click and install the software

Main Steps:



1. Install Software and Programmer's USB driver
2. Complete hardware wiring
3. Modify driver's parameters



1. Install Software and Programmer's USB driver

Double-click SmartkeyNetworksetup.exe to install Software.






Select "USB Driver- CDM v2.12.00 WHQL"

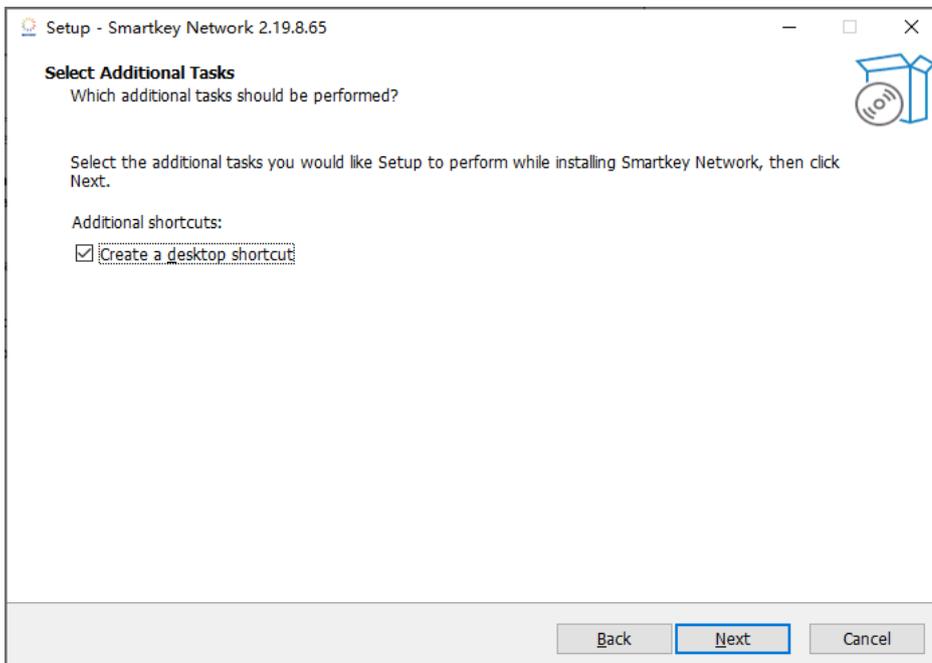
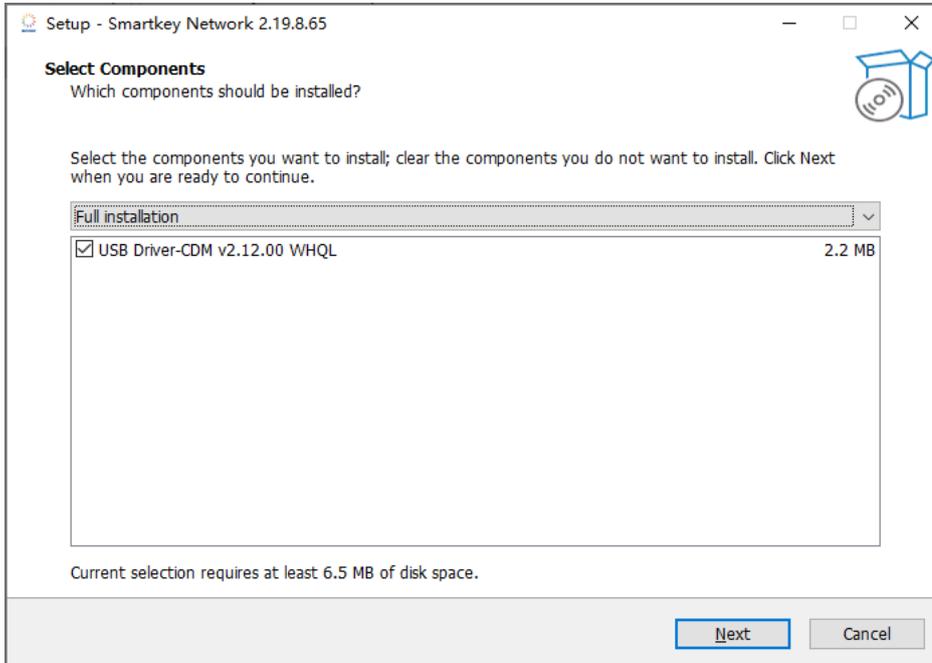


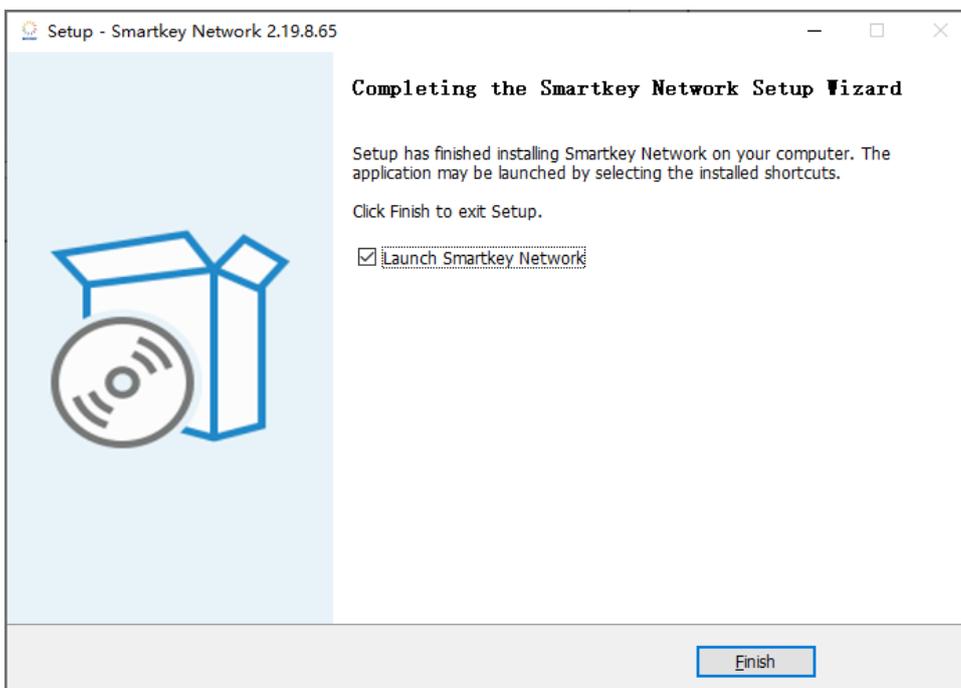
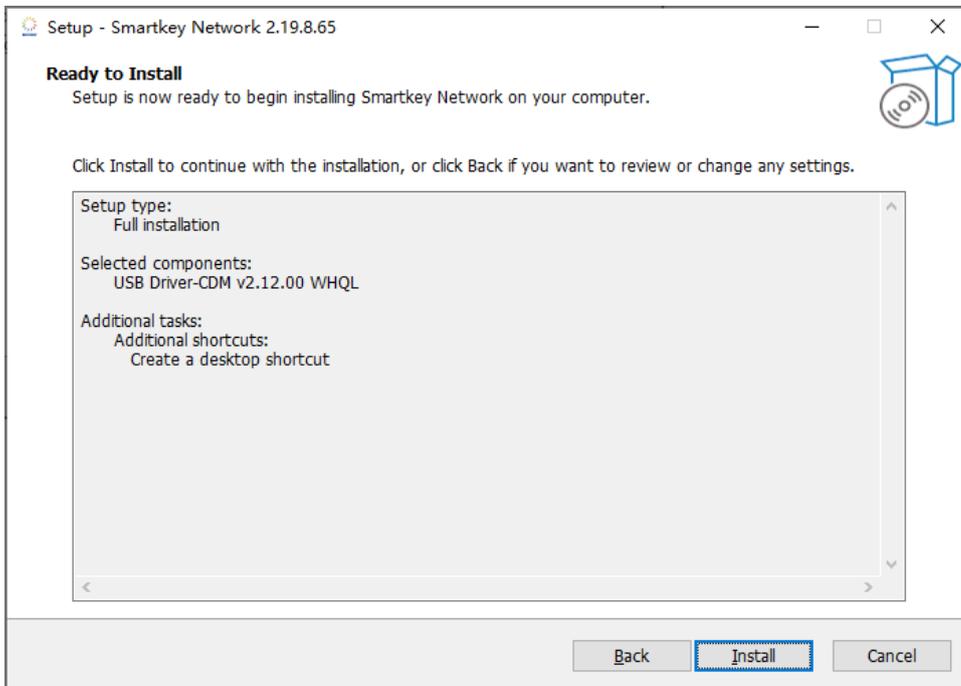


When programmer connect to PC's USB port, PC will cost few seconds to recognize programmer's port number. **Please follow below steps to complete the essential setting.**

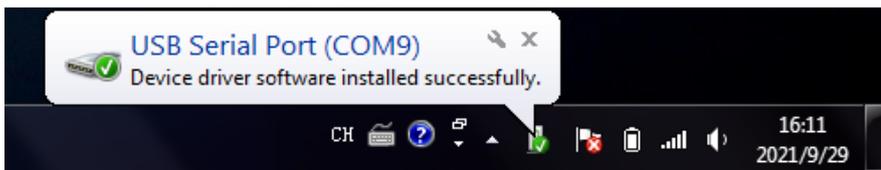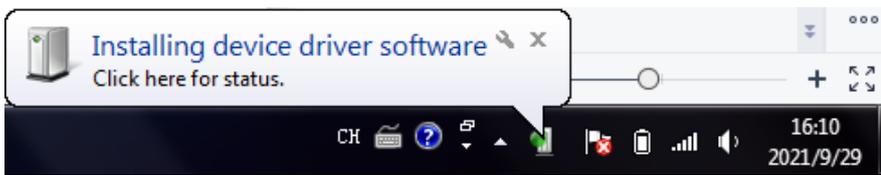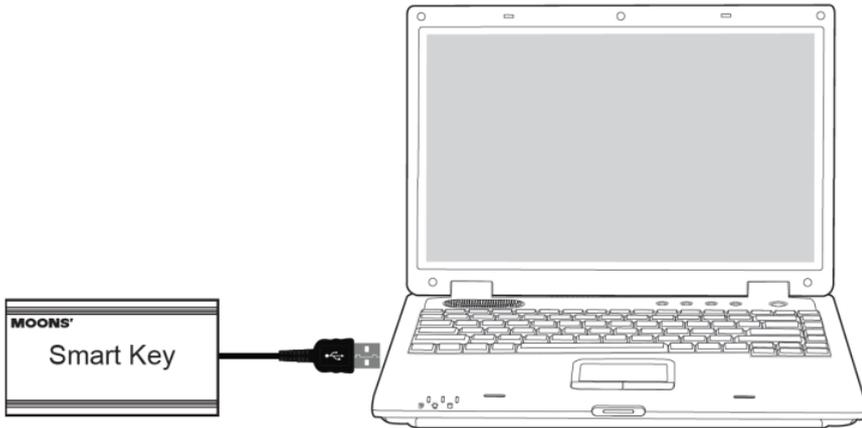


Next please enter computer manage device

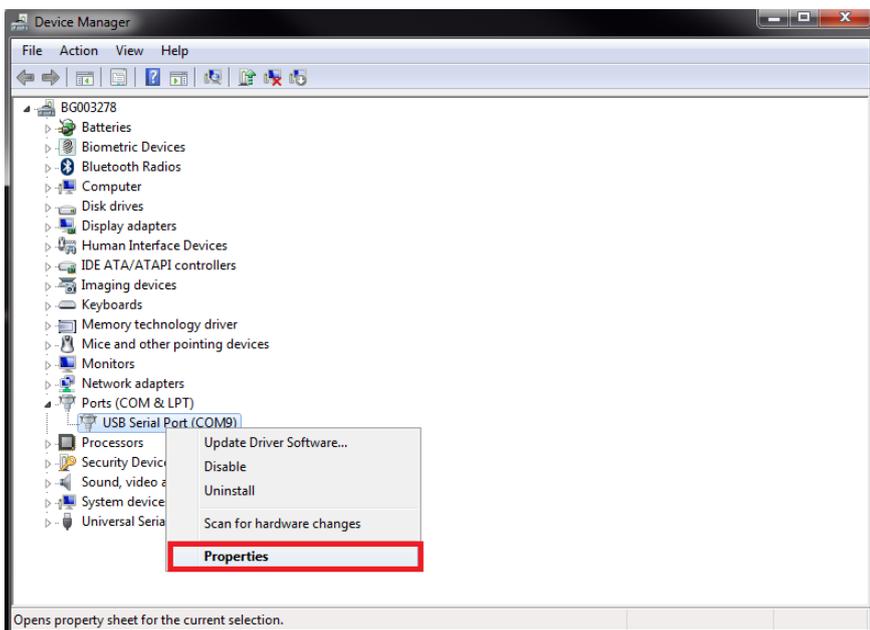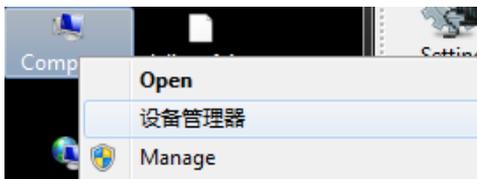

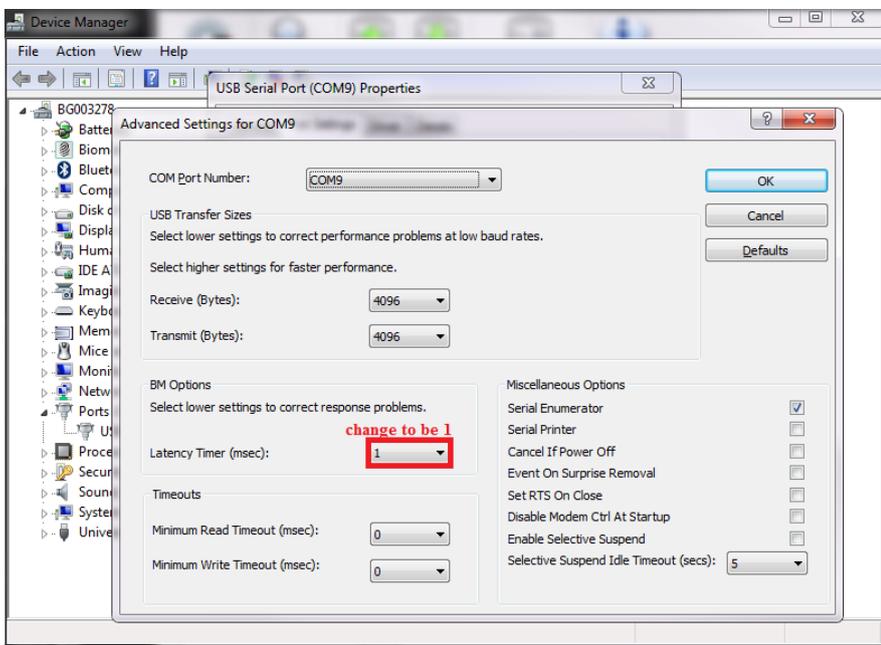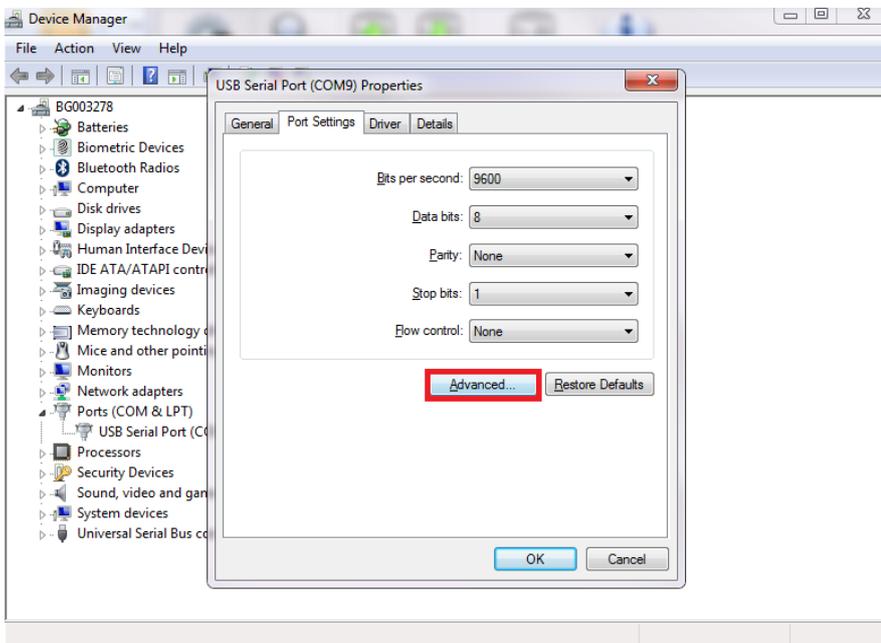


And then click OK to save.

2. Complete Hardware Wiring

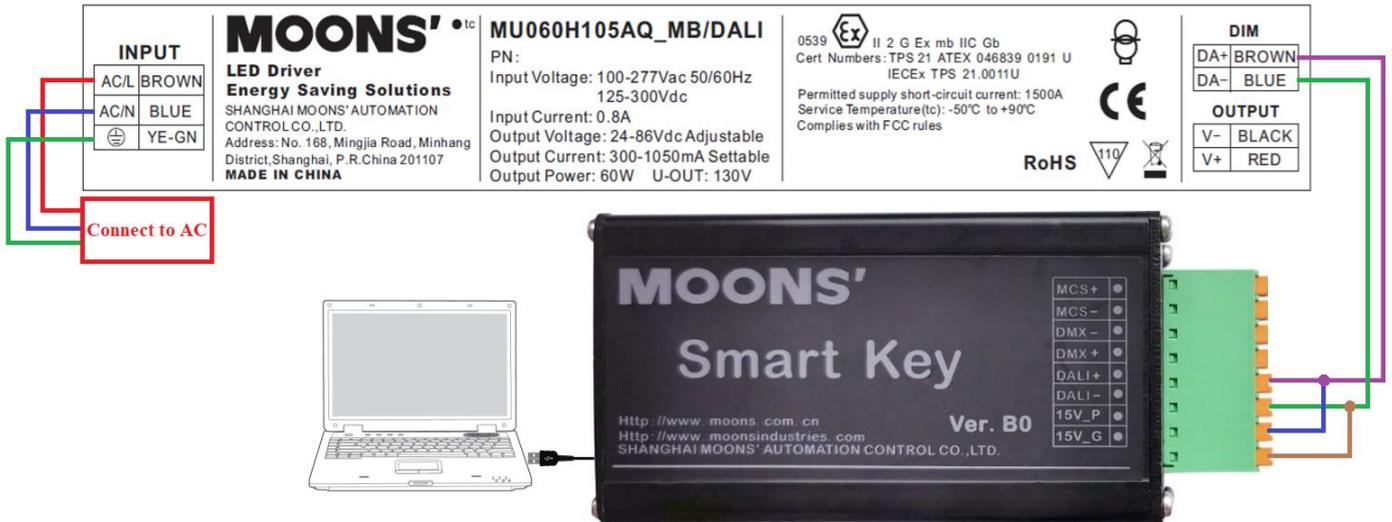


3. Modify driver's parameters




- 1) Run the software directly

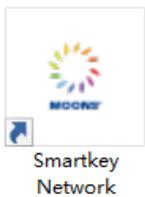


- 2) Setting → Choose COM → Choose Dali → OK

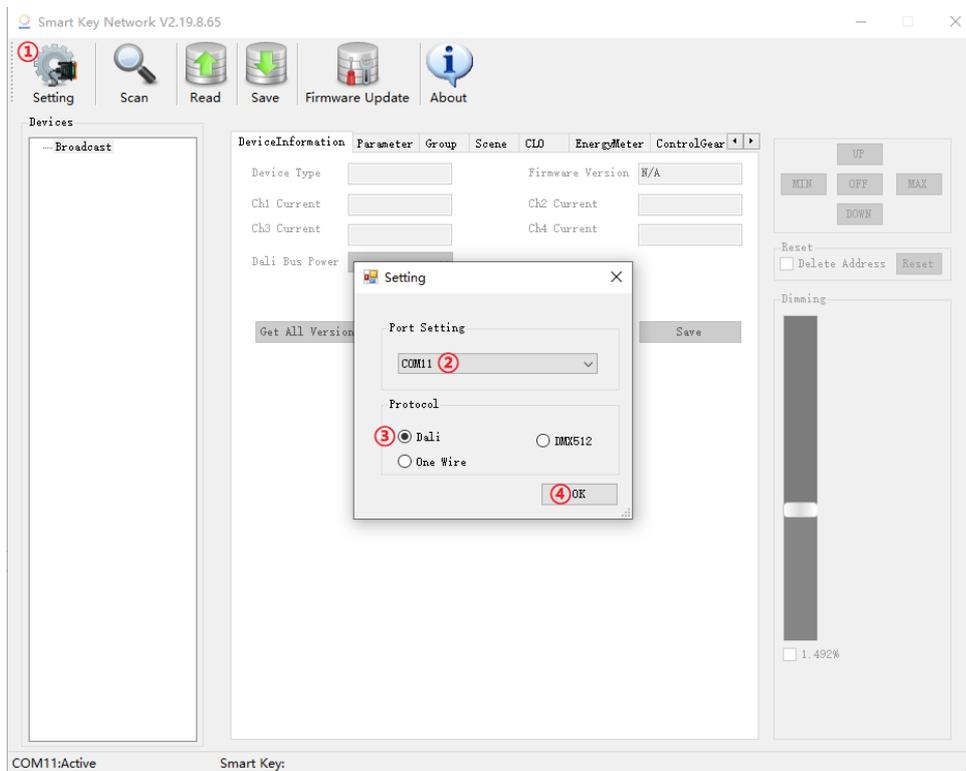

Scan → Search → Unaddressed Device Search

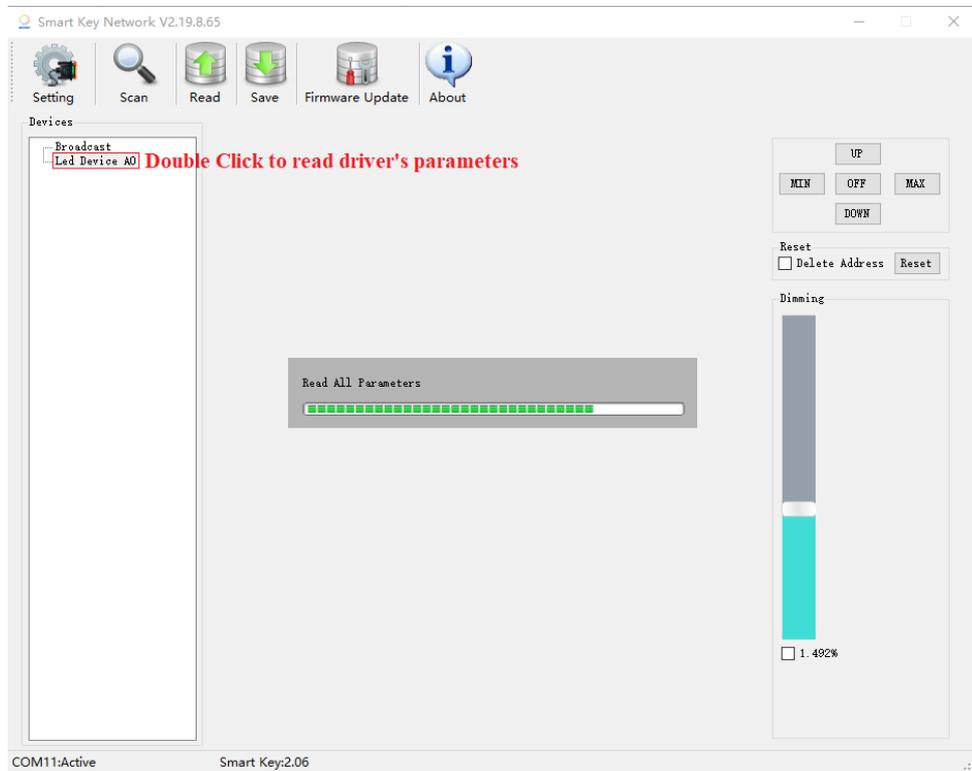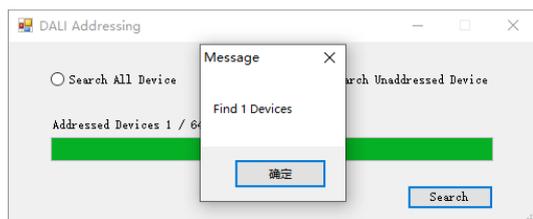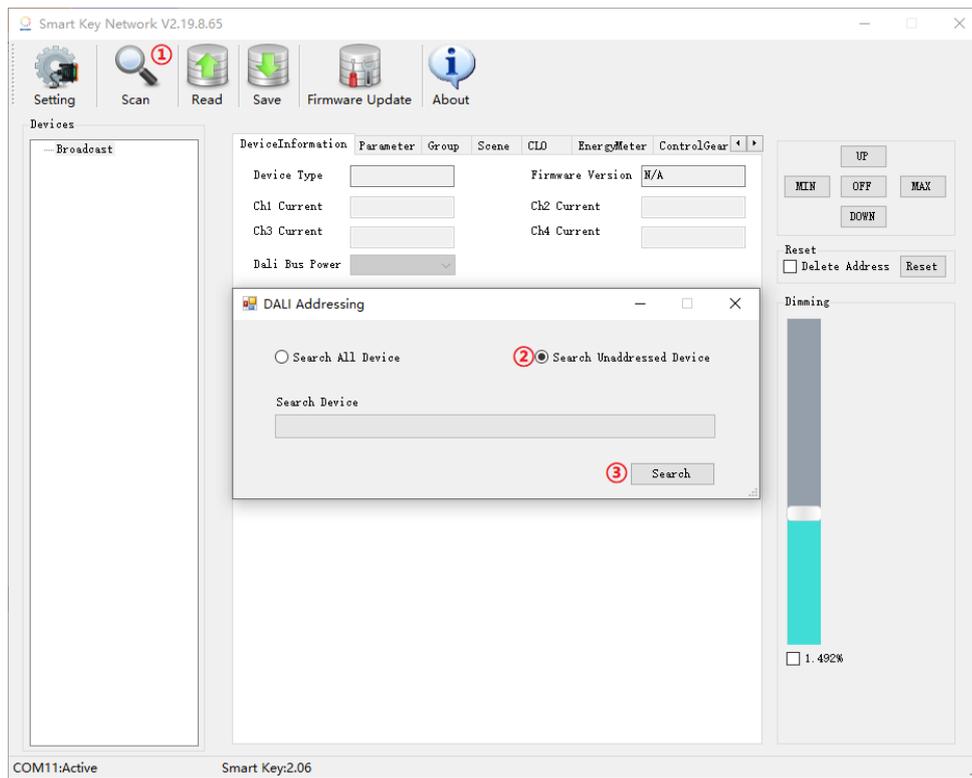

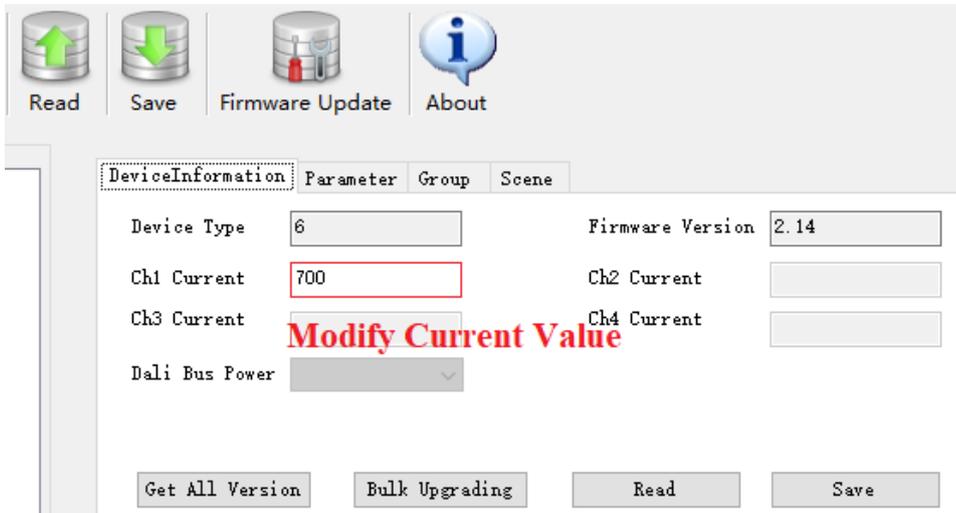

If click **Save**, it means that 4tabs **DeviceInformation** **Parameter** **Group** **Scene** parameters will be written.



If click **Save**, it means that only current tab **DeviceInformation** parameters will be written.

Because driver was scanned, it has DALI address, if you want to delete DALI address, please do below action, except driver's current, all DALI parameters will be reset, including DALI address.

